Enjoy your ride, worry free.

Prosidium's **Auto Care** extends the coverage

of your automobile's factory warranty

with longer, more comprehensive options.

For Assistance:

866-330-6117 E: claims@pwcteam.com F: 360-848-7923

For Roadside Assistance:

877-211-8136 Saferide Motor Club, Inc.

Prosidium Warranty & Capital

1500A E. College Way, PMB 541 Mount Vernon, WA 98273 prosidiumusa.com

US-PWC-PAC-B-A-9/2024




Prosidium

Auto Care

Auto Care Mechanical protection for new & pre-owned vehicles

COVERAGE OPTIONS	Engine	Transmission	Drive Axle	Seals & Gaskets	Air Conditioning	Heating & Cooling	Electrical	Braking	Suspension	Steering	Fuel Delivery	All Parts (Exclusionary	
Powertrain Preowned	గ్రా	Ĥ	00 0+0	0									
Powertrain Plus	గ్రా	Ĥ	0 − 0 0 + 0	0	**	J	Ì	6					
Preferred New & Preowned	Ē	Ĥ	0⊤0 0€0	0	***	B	Ż	6	-/////-	Ø	<i>(</i> 1)		
Certified	۲	Ĥ	0⊤0 0 + 0	0		B	Ś	Ô	-////	9	\frown	آگا	-
Maximum	Ē	Ĥ	0∓0 0≠0	0	*	B	Ż	٢	-////-	Ø	<i>(</i> 1)	آگا	
Maximum Wrap	— Mar	nufactur	er Warr	anty —	***	Ē	Ì	Ô	-////-	Ø	(f)		

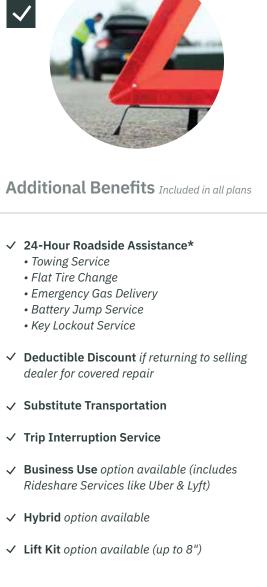

 \sum

*Provided by Saferide Motor Club, Inc. 877-211-8136



Powertrain

Engine Components: Engine block and cylinder head(s), and all internally lubricated parts, including pistons, pins, rings, connecting rods and bearings, crankshaft and main bearings, camshaft, followers and cam bearings, push rods, valves, springs, guides, seats, lifters, rocker arms, shafts, bushings, core plugs, timing gear, timing chain or timing belt, belt tensioners and retainers, eccentric shaft, oil pump, oil cooler and oil cooler lines. Also covered are the following: water pump, fuel pump, oil pan, intake and exhaust manifolds, engine mounts and cushions, engine torque strut, timing cover, valve cover(s), harmonic balancer, flywheel (flex plate) and flywheel ring gear, vacuum pump, dipstick and tube, all pulleys, and all internally lubricated parts of the turbocharger/supercharger, including waste gate, vanes, shafts, and bearings. The turbocharger / supercharger housing is covered only if damaged by the failure of an internally lubricated parts.

Transmission Components: (Automatic or Manual) Transmission case, transfer case, torque converter, and all internally lubricated parts contained within the cases, filler tube and dipstick, vacuum modulator, internal linkage and transmission mounts.

Drive Axle Components: (Front & Rear) Differential housing, trans-axle housing, final drive housing, and all the internally lubricated parts of the foregoing, axle shafts, constant velocity joints (except when CV boot is torn, perforated or leaking), universal joints, drive shafts, locking hubs, hub bearings, locking rings, supports, retainers and bearings.

Seals and Gaskets Coverage: Seals and gaskets are covered for all listed parts, provided the vehicle has 125,000 miles or less at the time of purchase.

Preferred

Includes Powertrain Plus components plus:

Suspension Components: Struts, mounting plates, retainer and bushing, upper and lower control arms, control arm shafts and bushings, the upper and lower ball joints, steering knuckles, wheel bearings, stabilizer shaft, linkage and bushings, torsion bars, spindle and spindle supports, radius arm and bushings, coil and leaf springs, strut bar and bushing.

Steering Components: Gear housing and all internally lubricated parts, including the rack and pinion, power steering pump, main and intermediate shafts, couplings, cooler and cooler lines, power cylinder and pitman arm, idler arm, tie rod and tie rod ends and control valve.

Fuel Delivery Components: Fuel pump, fuel tank, fuel tank sending unit, metal fuel lines, fuel injectors, carburetor, throttle body, fuel distributor, fuel injection pump, diesel injectors, diesel injector pump and vacuum booster pump.

Powertrain Plus

Includes Powertrain components plus:

Air Conditioning Components: (Factory Installed Units Only) Air conditioner compressor, clutch, clutch pulley, clutch coils, electrical HVAC actuators condenser, evaporator, expansion valve, accumulator, orifice, idler pulley, bearing, blower motor, temperature control programmer, high/low cut off switch and receiver/dryer.

Heating/Cooling Components: Water pump, thermostat, radiator and mounting brackets, cooling fan motor, fan blade, fan clutch, fan shroud and fan controller module, coolant recovery unit, blower motor and heater core.

Electrical Components: Starter motor, alternator, voltage regulator, distributor, ignition coil, starter solenoid, ignition switch, lock and tumbler, brake light switch, wiper motors, horn button and horns, manually operated switches, power door locks, window motors and regulators, mirror motors and controls, power antenna motor, power seat motor; cruise control transducer, engagement switch and servo; turn signal switch, wiper delay switch and controller, wiper/washer controller and pump, power sunroof/convertible top motor and switches, relays, gauges, electronic level control module, instrument cluster, electronic mixture control unit and sensors, electronic anti-detonation sensors, keyless entry system, and electronic anti-theft device (factory installed only).

Braking Components: Master cylinder, power assist booster, wheel cylinders, combination valves, metal hydraulic lines and fittings, disc calipers, backing plates, springs, clips, retainers, and electronic anti-lock brake system (ABS) and relays, parking brake linkage and cables and rear actuators.

Maximum

Includes Preferred components plus:

All Parts (Exclusionary): Maximum Plan covers all parts of the vehicle except for parts listed under the Exclusions from Coverage section of the agreement.

CPO Wrap and Maximum Wrap

Includes Maximum components plus:

All parts for the vehicle except components under the Exclusions from Coverage section of the agreement and does not provide coverage for components listed in the Engine, Transmission and Drive Axle sections under Schedule of Covered Parts.

This brochure is for marketing purposes only. Please see your agreement for complete terms, coverage, and exclusions